

## 5779 Bio-Kleen<sup>®</sup>

For Water Removal of Rosin Flux Residue

---

### Product Description

Kester 5779 Bio-Kleen is a highly concentrated liquid cleaner which is added to water to form a non-foaming solution for removing rosin flux residue. 5779 is 50 to 100% more concentrated than most other aqueous flux removers. This results in substantial savings in the amount of cleaner consumed. The use of this product permits soldering of electronic assemblies with non-corrosive rosin fluxes and eliminates the use of more expensive chlorinated and fluorinated solvents that are more toxic and pollute the environment.

Rosin that is used in rosin fluxes consists primarily of abietic acid. The mild alkaline chemicals in Kester Bio-Kleen products react with the rosin by a chemical conversion known as saponification to form soaps, such as an activator salts, which are water soluble residue and can be rinsed away with water. The cleaning system therefore functions by converting the rosin to soap and solubilizing the ionizable residue with clean water.

### Performance Characteristics:

- Enhanced ability to solubilize flux residues
- Effective for both rosin and water soluble flux chemistries

### RoHS Compliance

This product meets the requirements of the RoHS (Restriction of Hazardous Substances) Directive, 2002/95/EC Article 4 for the stated banned substances.

### Physical Properties

**Specific Gravity:** 0.982 ± 0.005

Antoine Paar DMA 35 @ 25 °C

**pH (4% solution typical):** 11.3

Hanna Instruments 8314 @ 25 °C

**pH (Concentrate):** 12.8

Hanna Instruments 8314 @ 25 °C

## Application Notes

5779 is specifically designed for use in automatic in-line spray cleaning machines. Excellent cleaning is accomplished with no-foaming and minimal odor. 5779 contains a unique blend of very effective organic anti-foaming agents. This product does not contain silicon defoamers or other oils that does not rinse completely from a circuit board assembly. The additives in 5779 prevent foaming of the rosin soap even in deionized water. No other foaming agents are required.

For applications involving the removal of rosin flux residues from circuit assemblies, a 4% solution of 5779 should be used. For removing solder paste flux residues (both rosin and no clean) a 9% solution of 5779 should be used. Modifications to the solution concentration may be required dependent upon particular production requirements. The concentration of the solution should be adjusted so that the solution is discarded and replaced at the end of an 8-hour shift. Adding concentrated 5779 to the cleaning bath will extend the life of the solution. However, when the soap content increases excessively, the cleaning efficiency will be reduced.

Application	5779
In-line conveyORIZED machines	2 to 6%
Soak Tanks	-
Dishwashers	-
Temperature range	60 to 71 °C (140 to 160 °F)

If oil is being injected into the solder wave, the residual oil on the circuit board assembly should be compatible with aqueous cleaning. Petroleum oils are not water soluble and most water soluble oils contain excessive surfactant that can cause foaming in the aqueous cleaner. Kester 5751 Tinning Oil is recommended since it does not foam in water.


## Process Control

The effective concentration of Bio-Kleen solution is reduced by saponification of the rosin and by the addition of water to replace losses from drag-out. Periodic additions of Bio-Kleen may be necessary to maintain a constant solution concentration and cleaning efficiency during use. The outlined alkalinity-titration procedure provides a reliable method for monitoring changes in the concentration of the Bio-Kleen solution.

### Procedure:

1. From the wash solution, take a 50 mL sample from below the surface with the pump shut off. Pipette 5 mL into a 200 mL Erlenmeyer flask.
2. Dilute with 50 mL of deionized water.
3. Add 5 drops of 0.05% phenolphthalein indicator solution. Titrate with 0.1 Normal hydrochloric acid to the first stable colorless or slight pink end point.
4. Add the correct amount of Bio-Kleen to maintain the wash solution at the desired concentration.

The graph below shows the acid titer for a corresponding concentration of Bio-Kleen.

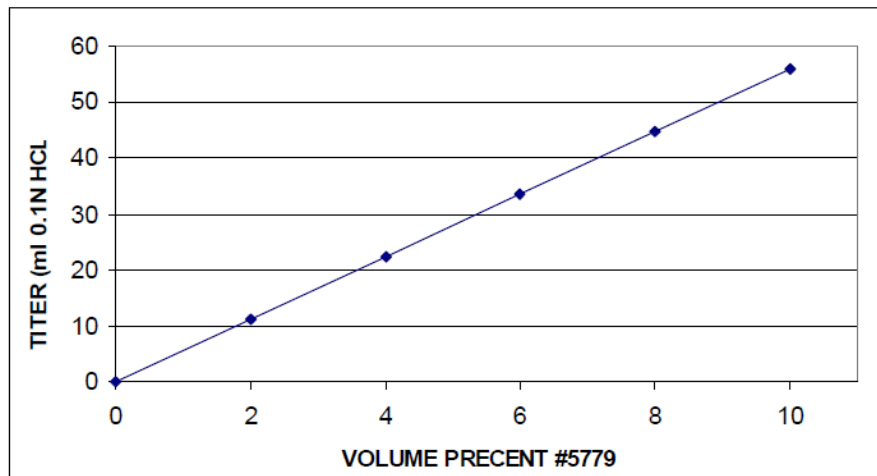

When the rosin soap content in the wash tank of an in-line spray cleaning system becomes excessive, the cleaning efficiency will be reduced regardless of control of the solution concentration. The wash tank should be drained at the point replaced with fresh Bio-Kleen solution.

## Cleaning

Deionized water is recommended for the wash solution and rinse tank section in-line spray cleaning equipment. Use of hard or high mineral content tap water reduce cleaning efficiency and cause scale build up in the cleaning equipment. There will also be increased consumption of 5779 because the saponifier will react with the minerals in hard tap water.

## Storage, Handling and Shelf Life

Shelf life is 2 years from date of manufacture when handled properly and held 10 to 25 °C (50 to 77 °F).

## Health and Safety

This product, during handling or use, may be hazardous to your health or the environment. Read the Safety Data Sheet and warning label before using this product. Safety Data Sheets are available at <https://www.kester.com/downloads/sds>.

## Contact Information

To confirm this document is the most recent version, please contact [Assembly@MacDermidAlpha.com](mailto:Assembly@MacDermidAlpha.com)

<b>North America</b> 800 West Thorndale Avenue Itasca, IL USA 60143  Phone: +1 800.2.KESTER	<b>Asia Pacific</b> 8/F., Paul Y. Centre 51 Hung To Road Kwun Tong, Kowloon, Hong Kong  Phone: +852.3190.3100	<b>Europe</b> Ganghofer Strasse 45 82216 Gerlinden, Germany  Phone: +49 (0) 8142 4785 0
---	--	---

Also read carefully warning and safety information on the Safety Data Sheet. This data sheet contains technical information required for safe and economical operation of this product. READ IT THOROUGHLY PRIOR TO PRODUCT USE. Emergency safety directory assistance: US 1 202 464 2554, Europe + 44 1235 239 670, Asia + 65 3158 1074, Brazil 0800 707 7022 and 0800 172 020, Mexico 01800 002 1400 and (55) 5559 1588

DISCLAIMER: All statements, technical information and recommendations contained herein are based on tests we believe to be reliable, but the accuracy or completeness thereof is not guaranteed. No statement or recommendation shall constitute a representation unless set forth in an agreement signed by officers of seller and manufacturer. NO WARRANTY OF MERCHANTABILITY, WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR ANY IMPLIED WARRANTY IS MADE. The following warranty is made in lieu of such warranties and all other warranties, express, implied, or statutory. Products are warranted to be free from defects in material and workmanship at the time sold. The sole obligation of seller and manufacturer under this warranty shall be to replace any noncompliant product at the time sold. Under no circumstances shall manufacturer or seller be liable for any loss, damage or expense, direct, indirect, incidental or consequential, arising out of the inability to use the product. Notwithstanding the foregoing, if products are supplied in response to a customer request that specifies operating parameters beyond those stated above, or if products are used under conditions exceeding said parameters, the customer by acceptance or use thereof assumes all risk of product failure and of all direct, indirect, incidental and consequential damages that may result from use of the products under such conditions, and agrees to exonerate, indemnify, defend and hold harmless MacDermid, Incorporated and its affiliates therefrom. No suggestion for product use nor anything contained herein shall be construed as a recommendation to use any product in a manner that infringes any patent or other intellectual property rights, and seller and manufacturer assume no responsibility or liability for any such infringement.

© 2019 MacDermid, Inc. and its group of companies. All rights reserved. "®" and "™" are registered trademarks of MacDermid, Inc. and its group of companies in the United States and/or other countries.